

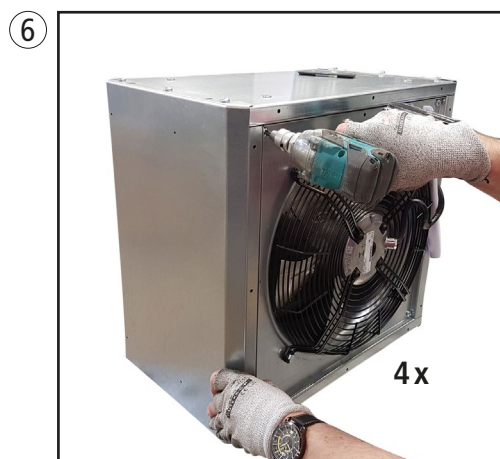
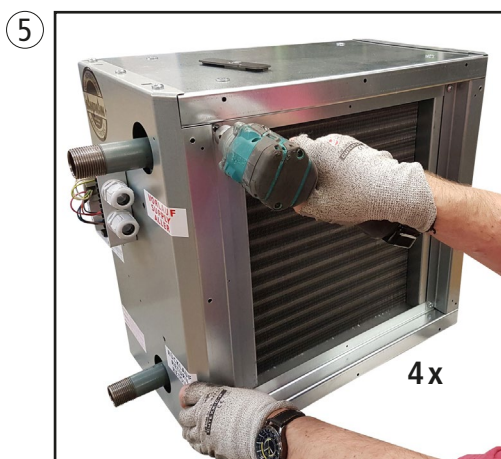
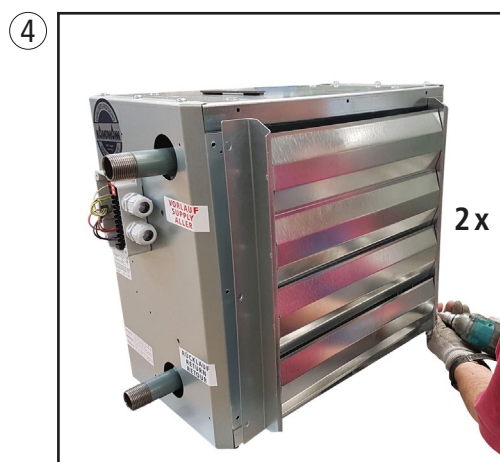
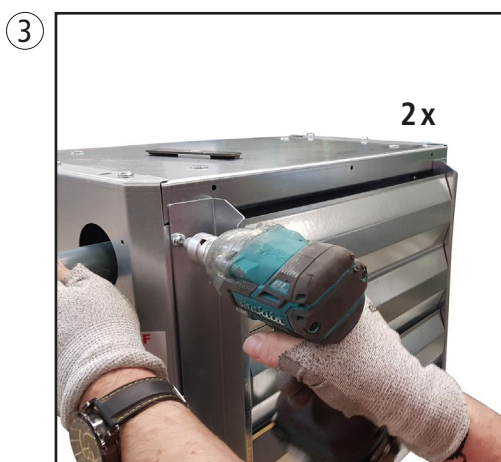
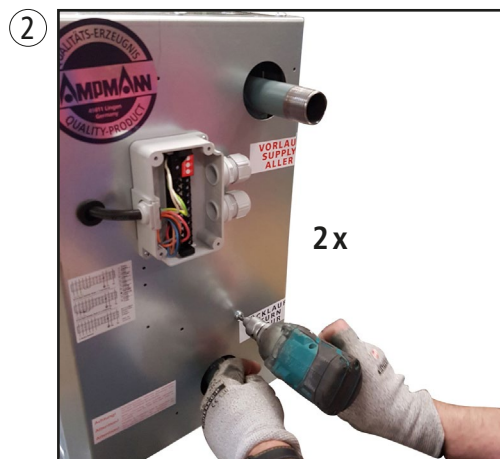


Montageanleitung Wechsel Cu/Al Wärmetauscher Lufterhitzer TIP/ TOP

- EN Installation instructions Exchange of a Cu/Al heat exchanger for TIP/TOP unit heaters
 FR Notice de montage Comment changer l'échangeur thermique cu/al d'un aérotherme TIP/TOP
 NL Montagehandleiding Vervanging van een Cu/Al warmtewisselaar bij luchtverhitters TIP/TOP
 PL Instrukcja montażu i obsługi Wymiana wymiennika ciepła Cu/Al w aparatach grzewczo-wentylacyjnych TIP/TOP
 IT Istruzioni di montaggio Ricambio scambiatore di calore Cu/Al aeroterma TIP/TOP
 RU Монтажная инструкция Замена теплообменника Cu/Al в тепловентиляторе TIP/ TOP

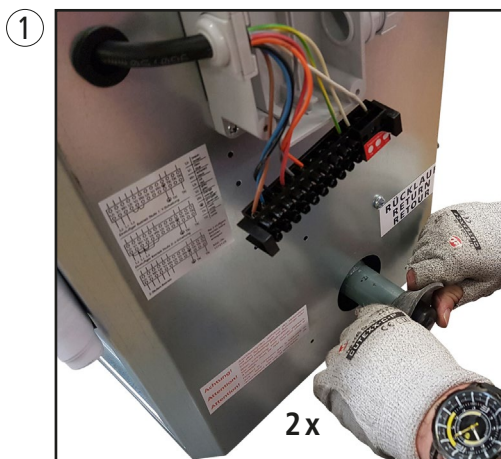

Montageanleitung Wechsel Cu/Al Wärmetauscher Lufterhitzer TIP/ TOP

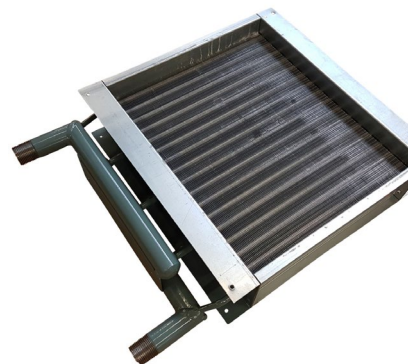